

WICKING PAD APPLICATION INSTRUCTION



1. Place the smooth side of the W. P. on the tread.




2. Cover it with the outer envelope, the valve must be placed over the W. P. . You can fix the W. P. or not, as the outer envelope will maintain it under the valve.

WICKING PAD APPLICATION INSTRUCTION



3. Twist the wings on the bead of the tire

WICKING PAD APPLICATION INSTRUCTION

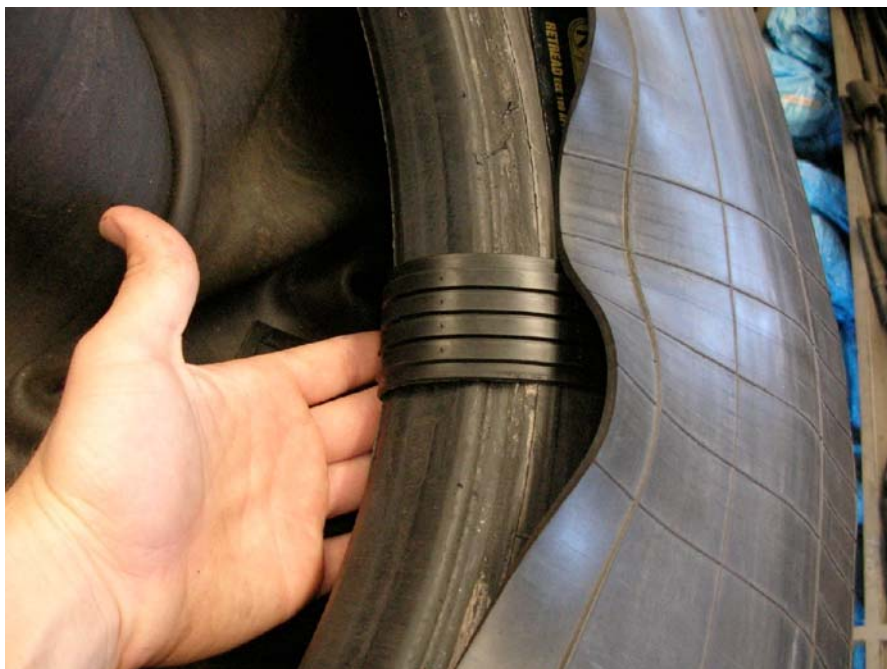

3. Twist the wings on the bead of the tire



4. Fit the inner envelope

WICKING PAD APPLICATION INSTRUCTION



5. The operation is completed



6. Go ahead with vacuum.